

IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weight down your E-Z UP®. Do not use in any potentially windy or rainy weather. Wind and rain can damage the E-Z UP® Instant Shelter® and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® is designed as a temporary shelter. Fabric top may fade if left up for extended periods.
- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® unattended.
- Keep all flame and heat sources away from fabric top. Do not build fires within shelter enclosure.

Fire resistant - meets CPAI-84 requirements.

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter®, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the top and frame dry completely before closing or storing to avoid mildew. Inner legs must be dry and clean before storing inside outer legs.
- Frame will operate better if occasionally wiped with silicone spray, on inner and outer legs, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Seam sealer are available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

For online warranty, service, parts and accessories as E-Z as 1-2-click, contact us at

www.ezup.com

Ask about our other E-Z UP® Instant Products™

Covered under one or more of the following patents: 4,607,656; 4,924,896; 5,244,001; 5,421,356; 5,485,863; 5,490,533; 5,511,572; 5,632,292; 5,632,293; 5,794,546; 5,797,412; 5,813,425; 5,865,127; 5,921,260; 5,934,301; 6,041,800; 6,070,604; 6,076,312; 6,129,102; 6,138,702; 6,192,910; 6,230,729; 6,240,940; 6,361,057; 6,363,956; 6,374,842; 6,382,224; 6,397,872; 6,412,507; 6,431,193; 6,439,251; 6,470,902; 6,502,597; 6,520,196; 6,601,599; 9,570,439; 94/2354; 91461; 132167; 95/0693; 95/6140; 95/6141; 84107895; 684,978; 2123096; 190486; 289754; 215344; 701077; 2128935; 2949648; 48648; DE 695 10 919 12; W096/03561. International Design Registration No. DM/009515 Benelux Design Registration No. 16959-504. Other US and foreign patents pending. © Copyright 2004 International E-Z UP, Inc. USA. All rights reserved. -0704



5 YEAR WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® Instant Shelter®, warrants to the original purchaser who provides a dated sales receipt, each part of the E-Z UP® Instant Shelter® to be free from defects in material or workmanship for a period of five years after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberated damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

We Make Life E-Z!™

INTERNATIONAL E-Z UP, INC.

1601 Iowa Avenue, Riverside, California 92507

(909) 781-0843 • Fax (909) 781-0586

 
www.ezup.com

Toll-Free Sales

800-45 SHADE

OWNER'S MANUAL

E-Z UP®
INSTANT SHELTER®

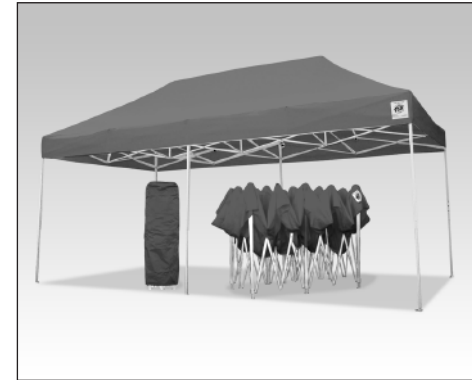

"Sets Up in Seconds!"™

ECLIPSE™ II

10' x 20'

Take time to learn how to provide years of durable and safe use from your E-Z UP® Instant Shelter®. After reading these instructions carefully, if you have any need of assistance, call our Customer Service Department.



Customer Service Hot Line

(800) SHADE ME

7 4 2 3 3 6 3

www.ezup.com

INSTRUCTIONS

Please read each step before you attempt to set up.
Save these instructions for future reference.

How To Set Up

*Note: First time attachment is required.

 
Top and frames are shipped separately to avoid damage. A first time set up requires that the two frames be assembled and the top to be attached to the frame. This first time set up takes a few minutes. Once top is permanently attached to frame, set up and take down are easily accomplished within seconds.




*** 1.** With a partner, gently expand the main frame and sub-frame to approximately half of its fully opened position. Face open ends of trusses toward each other.



*** 2.** Attach the main frame to the sub-frame at six points. The outside end of each truss is marked with either an "A" or "B" label. Locate these labels as well as the "A" "B" labels on the main frame angle brackets. Attach each "B" truss to the adjoining "B" bracket with the bolts provided. Insure that the "B" label on the truss touches the "B" label on the bracket and tighten the bolts securely by inserting the allen wrench into the bolt and securing the washer with the open end wrench. Do not overtighten bolts - insure that they can still rotate easily. Complete by attaching the remaining "A" trusses to the adjoining "A" brackets.

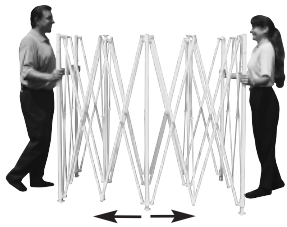

 
3. Place your E-Z UP® Instant Shelter® frame in the center of area to be shaded. With partner on opposite 10' sides of shelter, grasp outer legs, lift off the ground, and step backwards stopping at full arms' length - approximately 3/4 its total size.

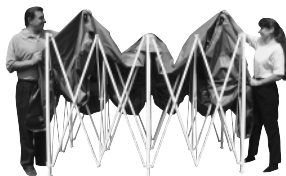


*** 4.** Gently unfold the fabric top and place it over the open shelter. Align the four corners of the top over the four corners of the frame.



 *** 5.** Attach the top to the frame by matching Velcro® strips on the top with the Velcro® strips on the frame. Pull the corners down fully. Push the Velcro® firmly together at each corner.

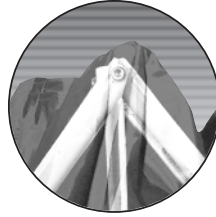

 
*** 6.** To secure the top to frame, align each grommet hole on valance with the bolts in frame.

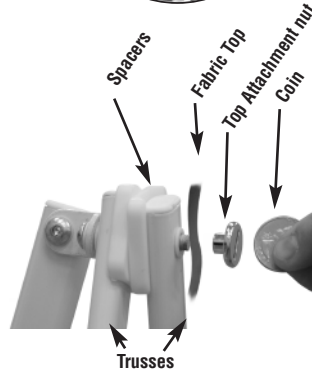


*** 5.** Unscrew top attachment nut from bolt. Place grommeted fabric top over the bolt, screw on top attachment nut and tighten until snug. Top should rotate easily - do not overtighten. Repeat this procedure on the remaining grommets.



 8. With two hands grasp the bottom of the diamond shaped area of trusses on the opposite 10' sides of shelter. Lift up and continue stepping backward until shelter is fully opened. **Be careful not to pinch fingers.**

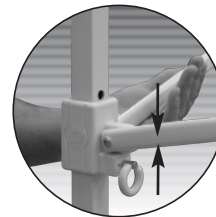

 9. Engage the auto slider at each corner by pushing up with one hand while holding down the top of the leg with the other hand. The quick pin will engage the hole. Then pull down the hem of the top. Repeat at all four corners.

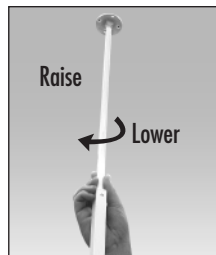

10. If it is necessary to adjust top tension, twist clockwise to lower peak pole; twist counter-clockwise to raise center peak pole. Do not twist more than three revolutions. (Height is set at factory)



11. With partner, lift up two adjacent outer legs 1" and lower the inner legs until snap button locks. Repeat on opposite legs. **Be sure to adjust two legs at one time to avoid frame damage.**



12. Lower adjacent center legs until snap button locks.

NOTE: ONCE TOP IS PERMANENTLY ATTACHED, ONLY PERFORM STEPS 3 AND 8-12 TO SET UP.

How To Take Down



1. Depress snap button on one center leg and telescope inner leg into outer leg.



 
2. With partner on opposite 10' sides of shelter, lift outer leg up 1", depress snap button and telescope inner leg up into outer leg. Repeat steps 1 and 2 on remaining legs.



3. Release the auto slider at each corner by first lifting hem of top. With one hand, push up on truss near slider, release quick pin by pulling ring.



4. Grasp the top of the diamond shaped area of trusses, on the opposite 10' sides of shelter, lift shelter up slightly and shake while stepping toward one another.

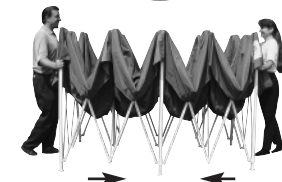

5. Grasp adjacent outer legs and gently push shelter together until fully closed. **Be careful not to pinch fingers!** Store shelter in cover bag in upright position.